


Quick Start Guide

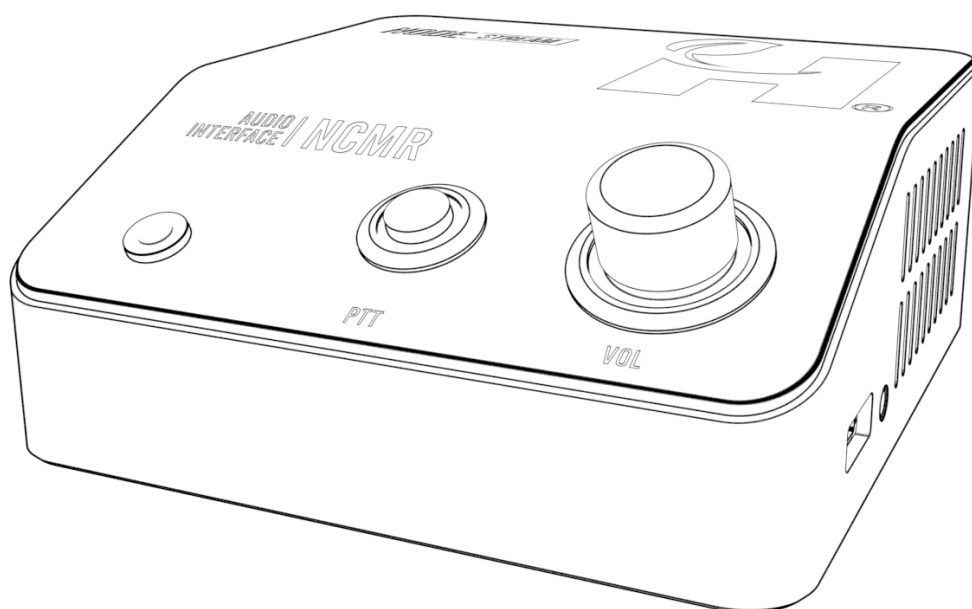


Welcome to the Nodestream RiS Nodecom (NCMR)

Please read these instructions carefully before using this product, and save this quick start guide for future use. See the User Manual for full details via the QR code on the back page.

Two-way audio streaming solution




In the Box

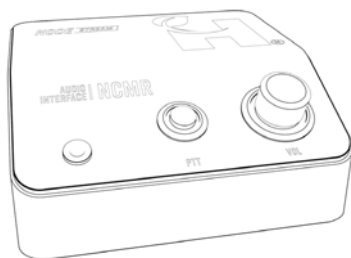


RiS Nodecom (NCMR)




WiFi Antenna

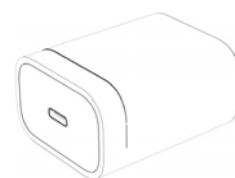

5V USB-C PSU

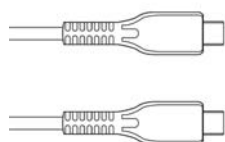


USB-C to USB-C cable

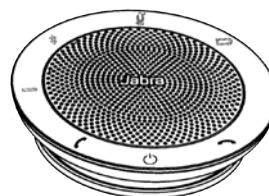


USB Speakerphone

Rear Connections

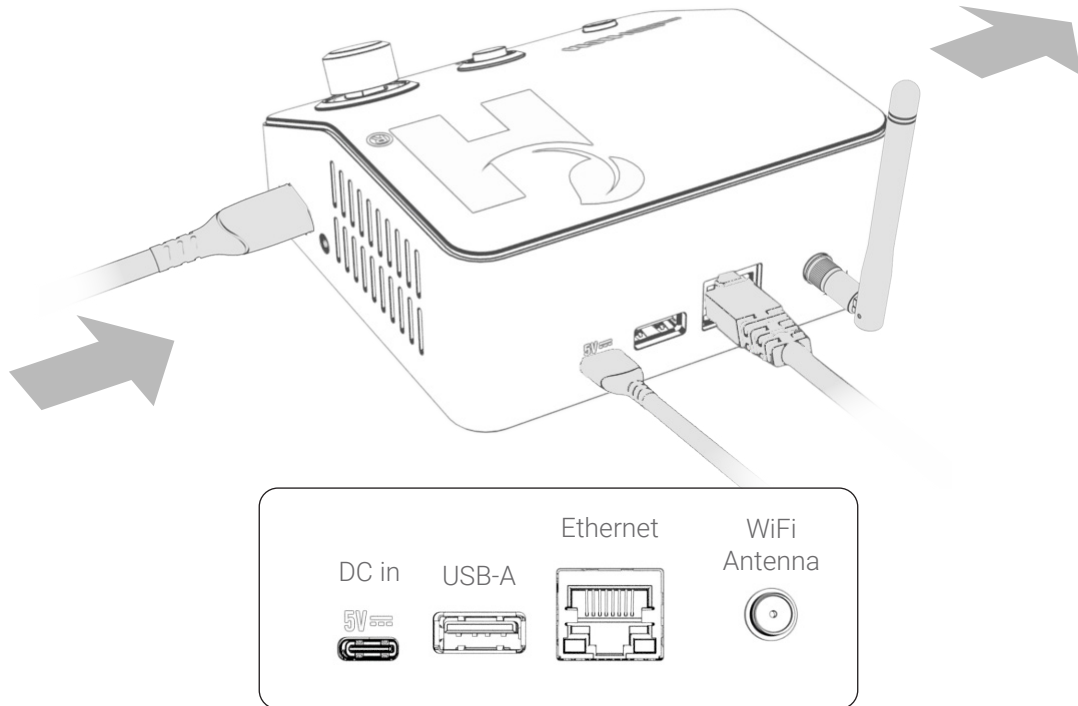

Ensure adequate spacing to allow cooling air to travel through vents as shown by the arrows

User Interface

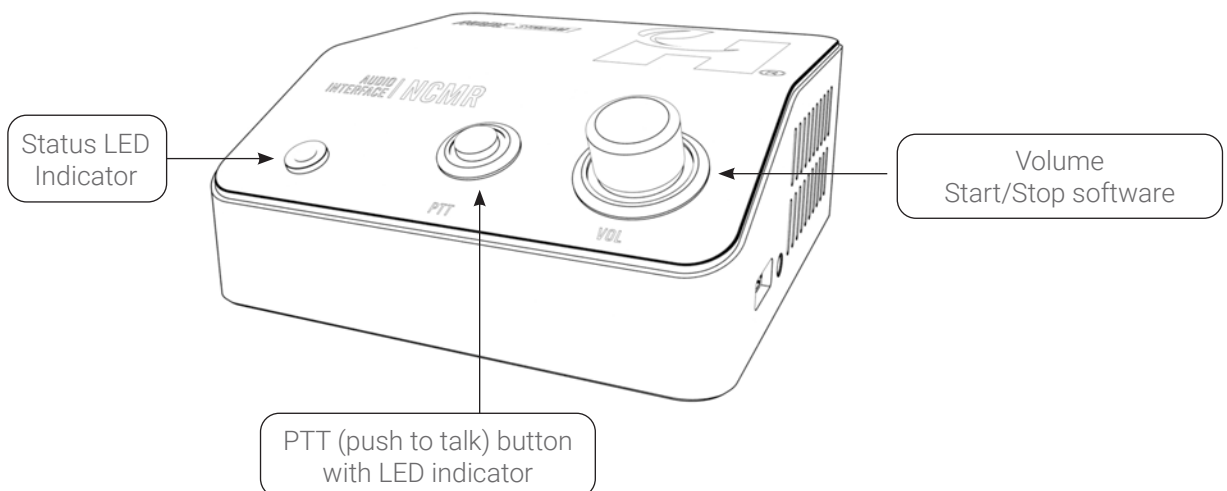

Via web browser

- 1 Connect the RiS Nodecom device to your LAN via the Ethernet port and power the device
- 2 Configure the IPv4 settings of a computer connected to the same network

IP	192.168.2.x
Subnet	255.255.255.0
Gateway	192.168.2.1
- 3 Navigate to <http://192.168.2.1> from a web browser and login with

User	admin
Password	admin
- 4 When prompted, enter a new password
- 5 Configure device network settings as provided by your Network Administrator
- 6 Once connected and configured on your local network, the RiS Nodecom device will show online in the Harvest RiS Deliverer application and will be ready for connection to another device.



Due to the possibility of conflicting IP addresses, only 1 device can be configured at a time. Once network settings have changed, the device can remain connected




User Manual

Refer to the RiS Nodecom user manual for additional information.



- RiS networks require specific port settings, see user manual for details
- Devices need to be manually added to the Deliverer application. See Deliverer User Manual for more information



Status LED





 Power on (blue)

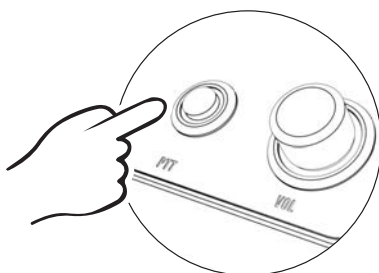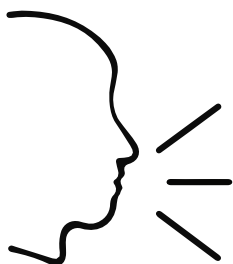

**AUDIO
INTERFACE | NCMR**

PTT (Push To Talk)



-  (Off) Software not running
-  (Blue) Software running
-  (Green) Audio connection active, mic muted
-  (Red) Audio connection active, mic open

Press and Hold



Start talking

LED
Red



Release to
mute

LED
Green



Open Mic



Press 3 times to
open mic

LED
Red



Press for 1
sec to mute




LED
Green




VOL (Volume)




Press to toggle through
audio devices

-  (Blue) Speaker
-  (Red) Microphone
-  (Green) Monitor

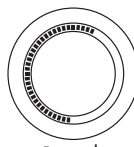

Increase volume

Turn clockwise

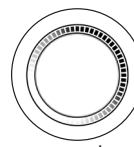

Decrease volume

Turn counter-clockwise


Mute

Decrease volume until
LED is rotating

Factory Reset



Press & hold
PTT & VOL
buttons

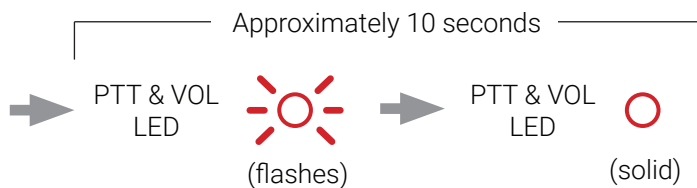

Device will reset to factory default user login and network settings



User Resources



Contact and Support
support@harvest-tech.com.au

Troubleshooting

Issue	Cause	Resolution
Device not powering	AC or DC not connected. Faulty or incompatible PSU	Confirm PSU is plugged in and AC supply on Confirm USB-C cable is connected correctly Test with alternative PSU If using an alternative PSU ensure it meets required specifications, see User Manual
Network issue (Device showing "offline" in Deliverer application)	Network not connected or out of range Network settings incorrect Device IP address incorrect in Deliverer application	Check Ethernet cable or WiFi is connected Ensure antenna is correctly installed Check network settings, contact your network administrator to diagnose network Confirm IP address of device matches that set in Deliverer
Forgot login or network details	N/A	Factory reset to defaults (see "Factory Reset" on page 5)



Harvest Technology Pty Ltd
7 Turner Ave, Technology Park
Bentley WA 6102, Australia
www.harvest.technology

All rights reserved. This document is the property of Harvest Technology Pty Ltd. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, photocopy, recording or otherwise without the written consent of the Managing Director of Harvest Technology Pty Ltd.

HTG-TEC-GUI-018_0